




Cable Tray Accessible

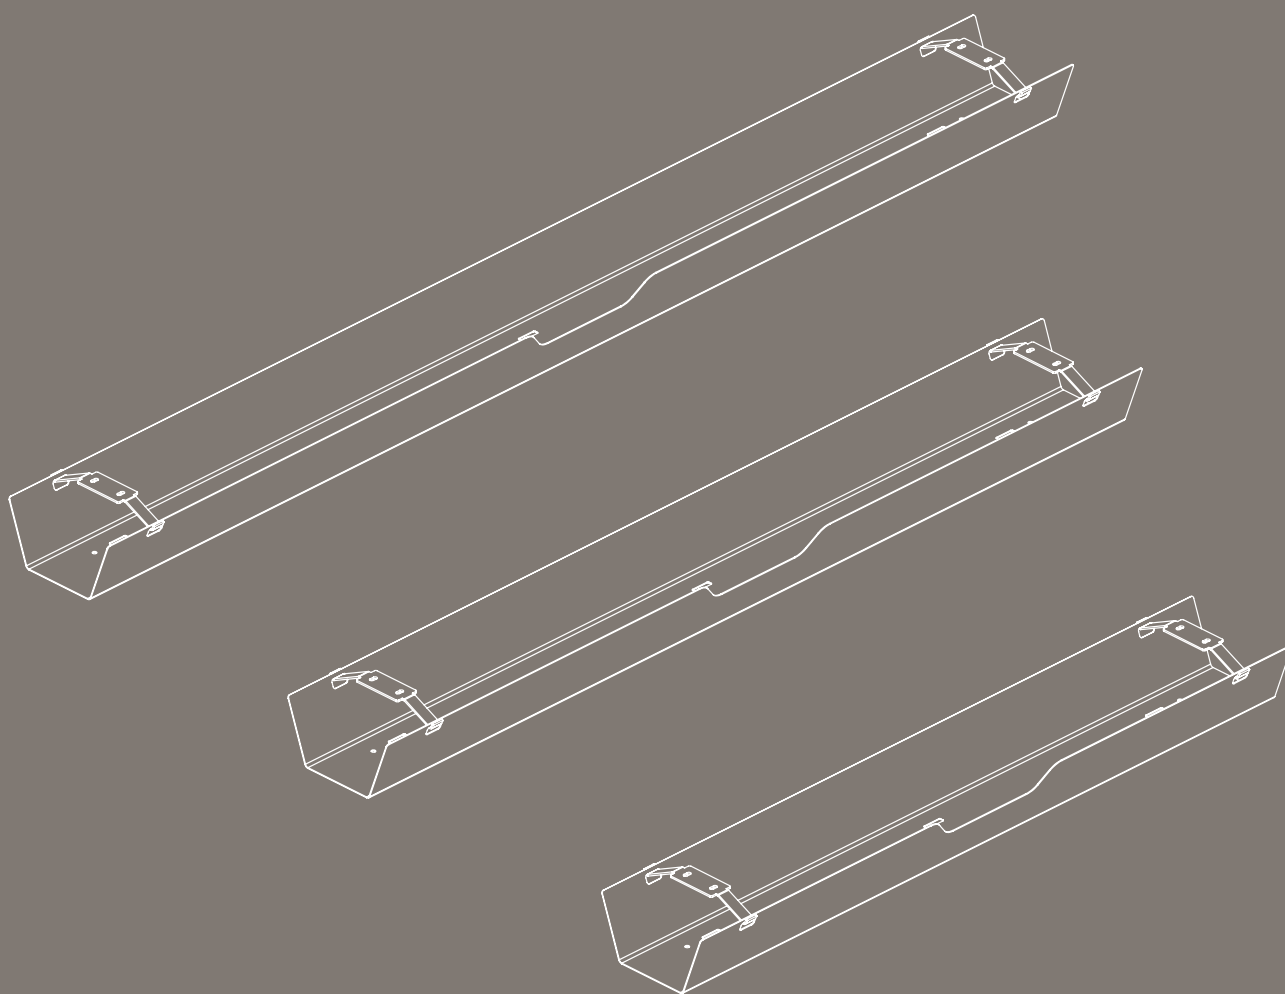

Parts

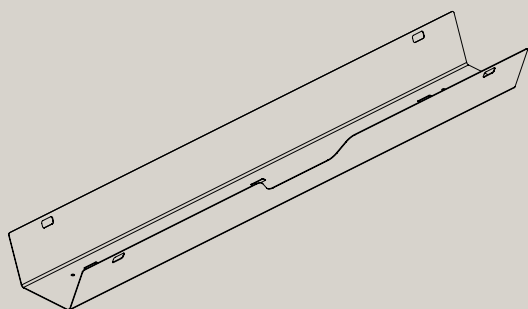


1 x Cable Tray

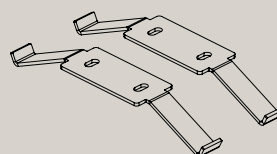


2 x Mounts

What you will need

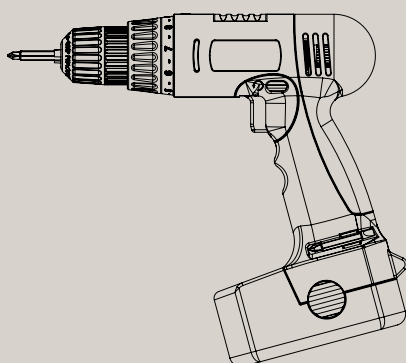


1 x Electric Drill

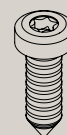

4 x Self-tapping screws


Step 1

Place the Cable Tray upside down and use the holes as a template for pre-drilling.

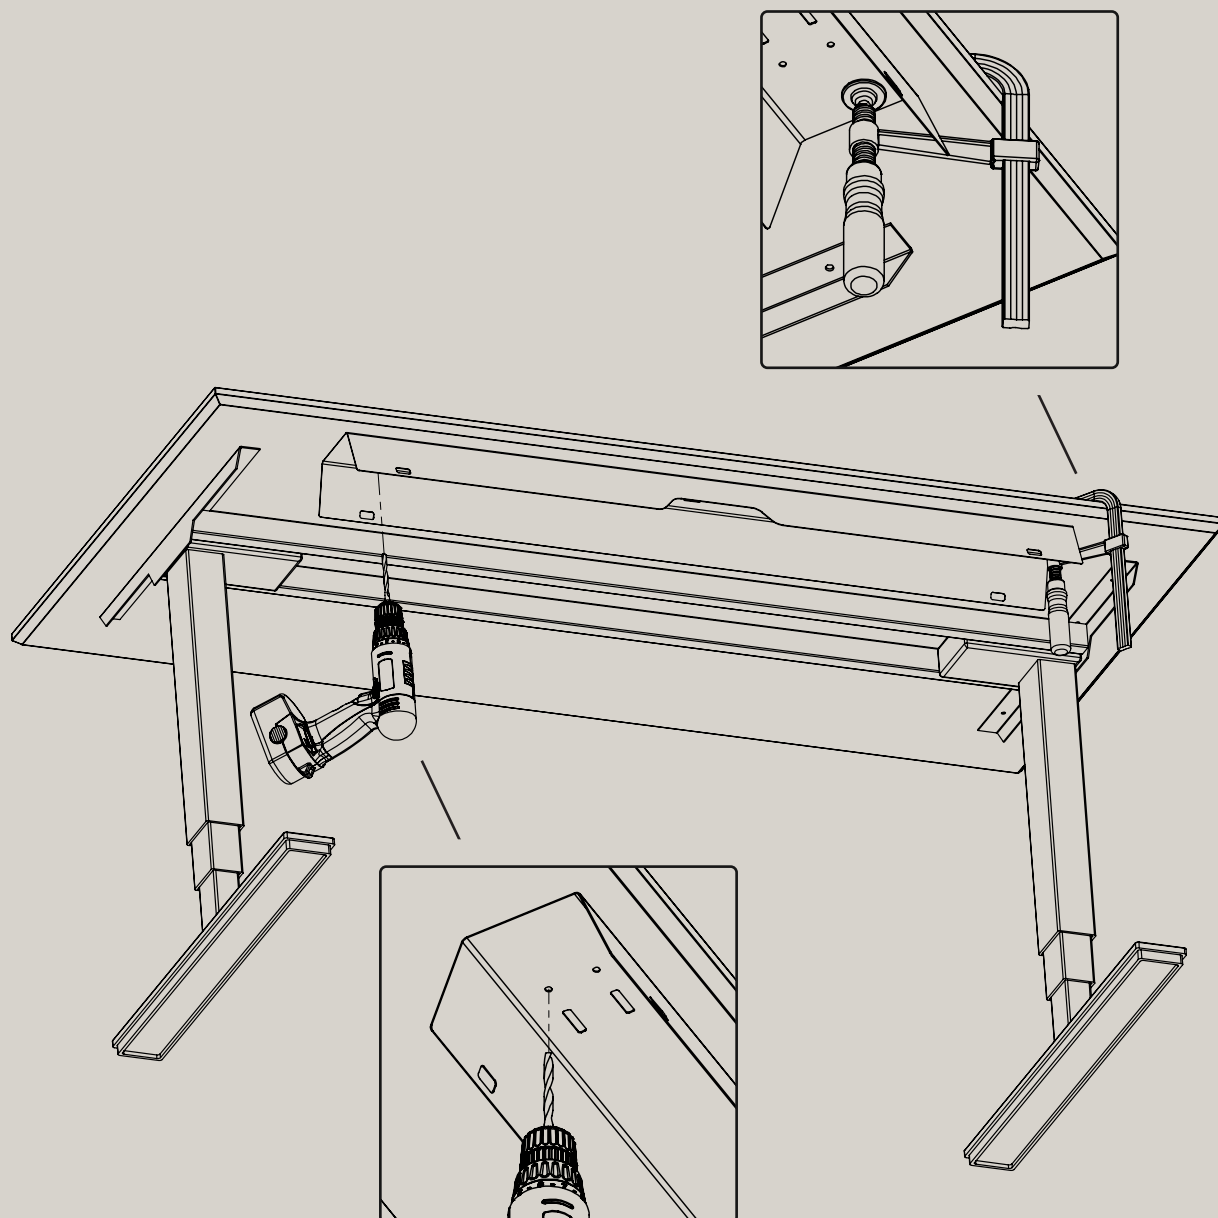


Step 2


Place the Mounts, carefully insert the self-tapping screws into the holes and use the electrical drill to tighten them securely.

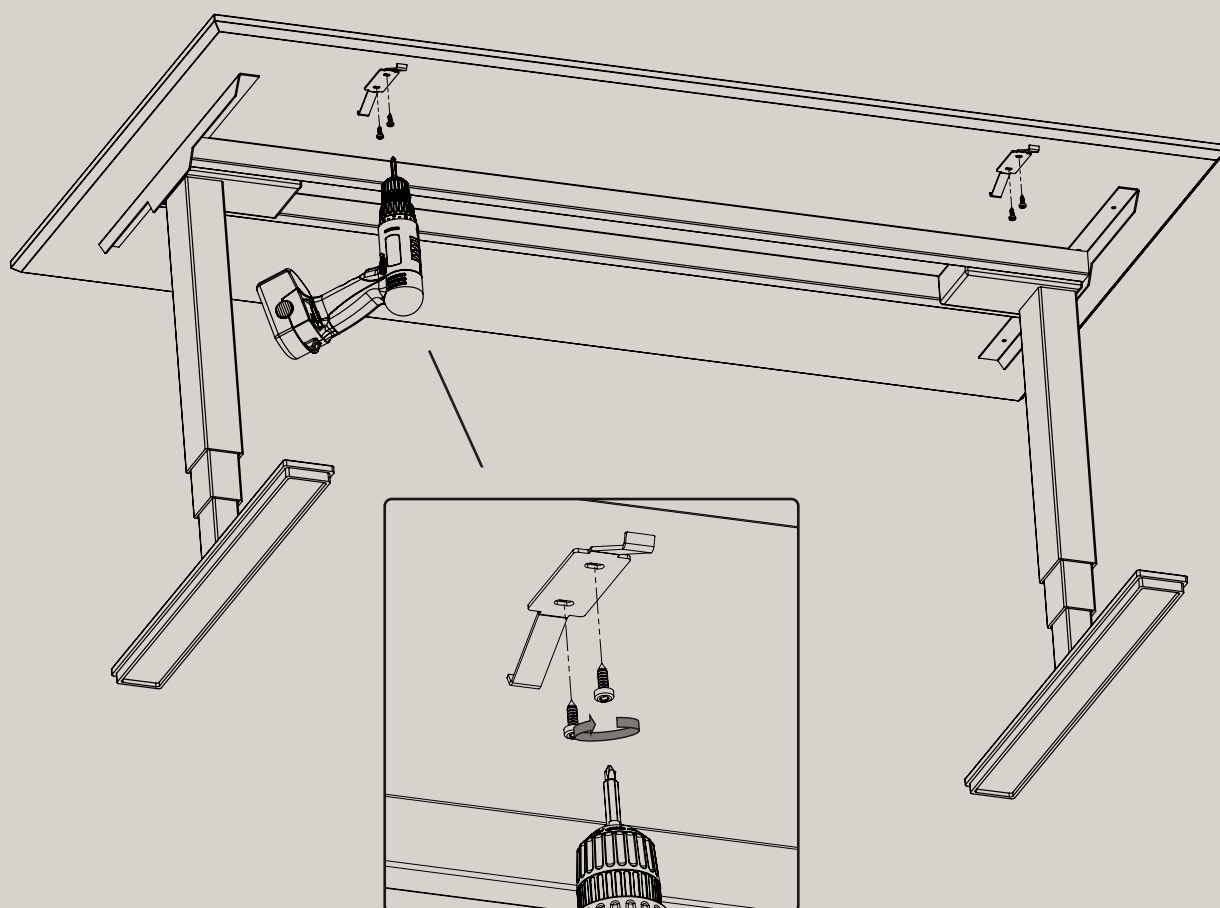

Step 3

Place cables into the Cable Tray and close it.

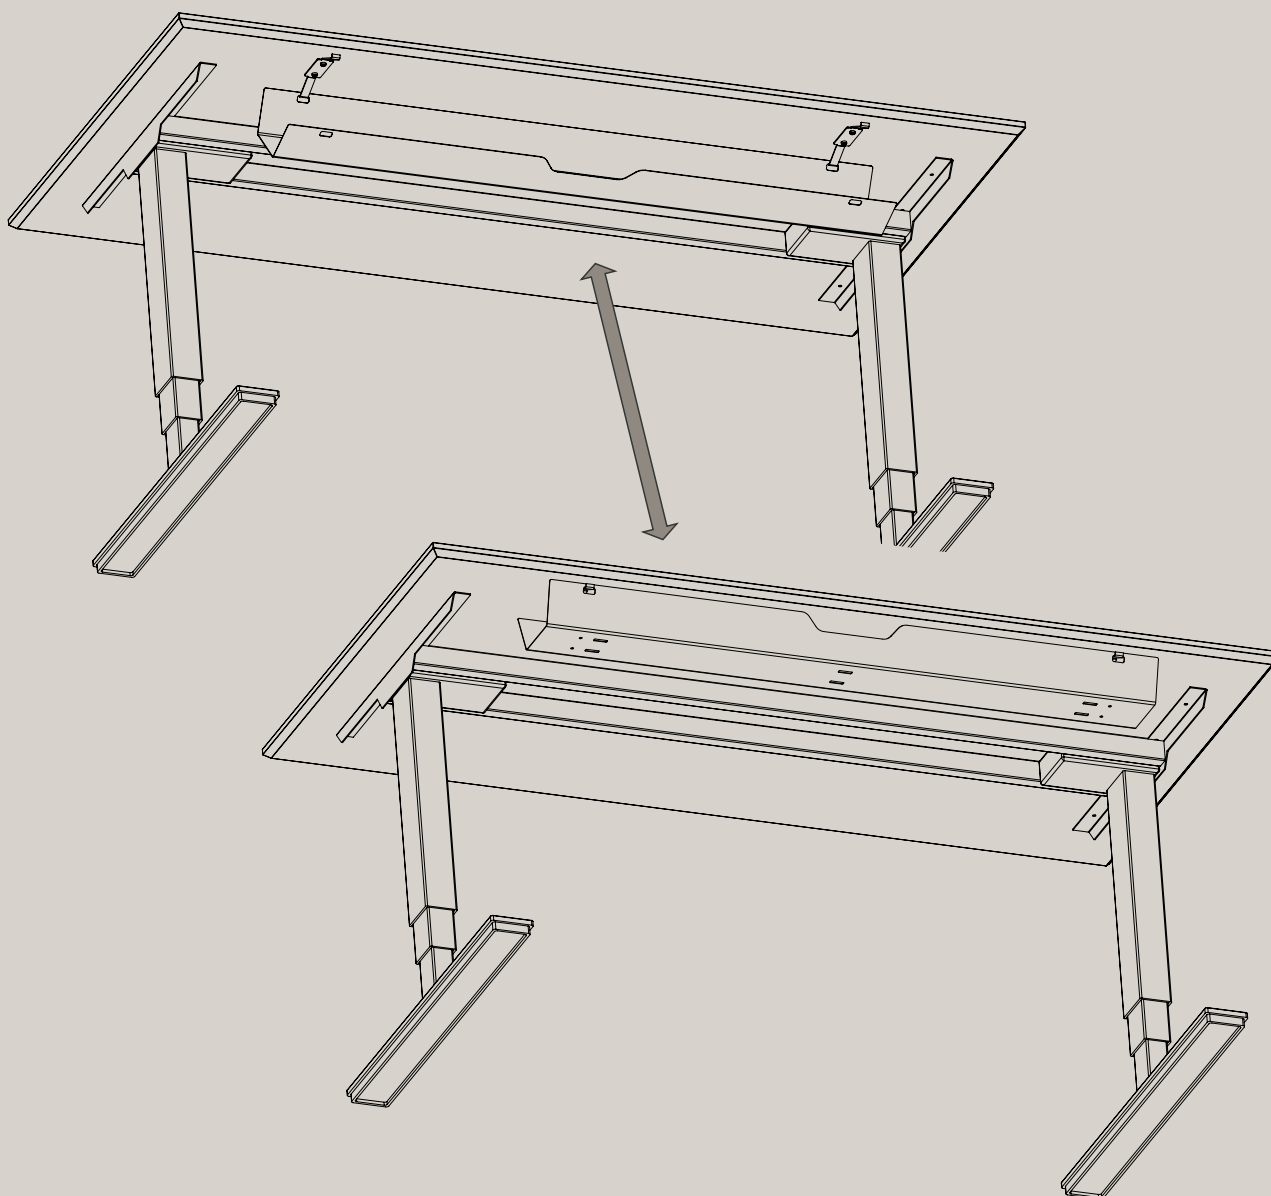

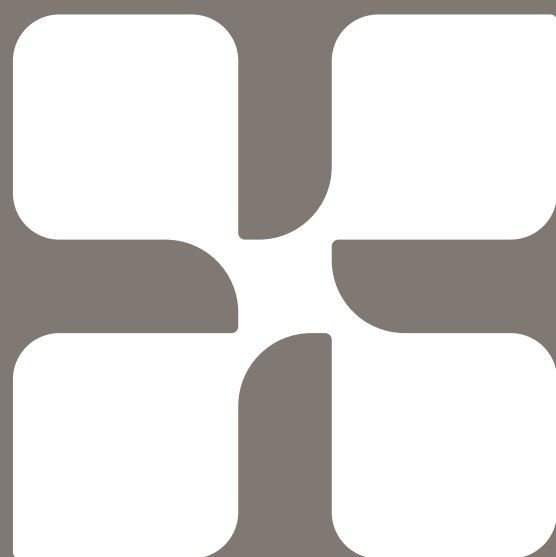

apto plus